
Owner's Manual

DM-30

PERSONAL
MONITOR AMPLIFIER

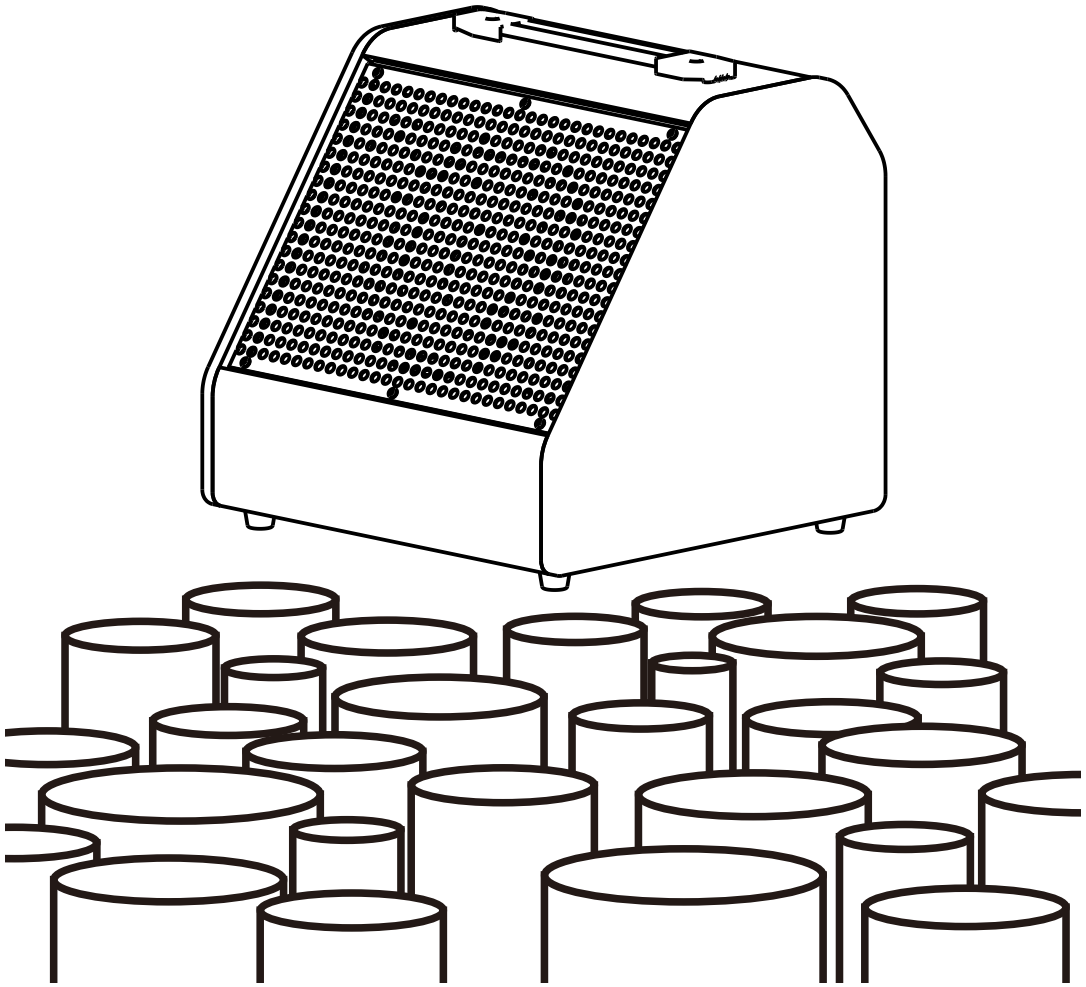

WARNING!-IMPORTANT SAFETY INSTRUCTIONS
BEFORE CONNECTING, READ INSTRUCTIONS


1. Use only the supplied power supply or power cord. If you are not sure of the type of power available, consult your dealer or local power company.
2. Never break off the ground pin on the power supply cord.
3. Never attempt to by-pass the fuses or fit ones of the incorrect value.
4. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
5. Refer all servicing to qualified service personnel.
   Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Do not allow liquids of any kinds water, soft, drinks, etc. to penetrate the unit.
   Never place objects filled with liquids, such as vases or glasses on the DM-30 this can cause electric shock.

   Do not place naked flame sources, such as lighted candles, on the DM-30 as this can cause fire.
8. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.

Follow all instructions and heed all warnings
KEEP THESE INSTRUCTIONS!

Thank you for selecting the DM-30 personal monitor amplifier! Please take the time to read this manual carefully to get the most out of the unit. We recommend that you keep the manual at hand for future reference.

FRONT PANEL

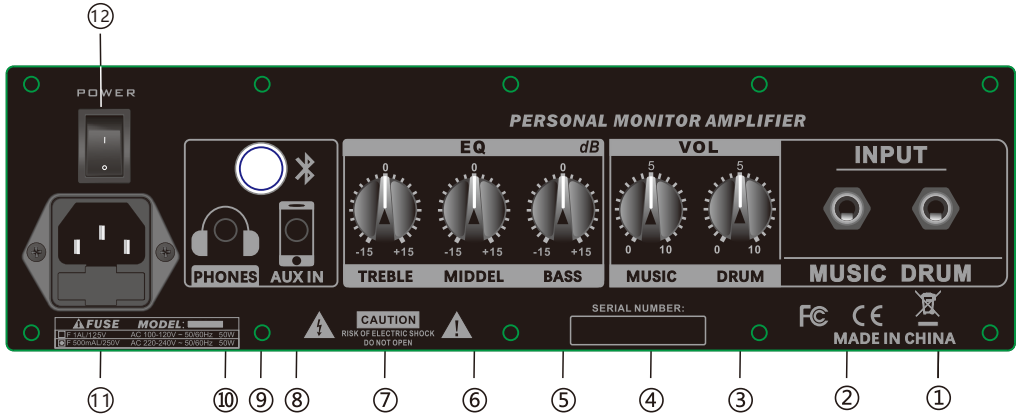

1.DRUM INPUT
Connect your device such as electric drum, keyboard etc. to this input.

2.MUSIC INPUT
Connect your another device such as electric drum, keyboard etc. Phones to this input.

3.DRUM VOL
This knob adjusts the volume of channel one.

4.MUSIC VOL
This knob adjusts the volume of channel two.

5.BASS
Adjust the amount of low frequency level.

6.MIDDEL
Adjust the amount of MID frequency level.

7.TREBLE
Adjust the amount of high frequency level.

8.AUX IN
Connect the output of an MP3 or CD player to this 3.5 jack.

9.BLUETOOTH
Click to open the Bluetooth function of --LED rapid shine; search equipment name: Drum AMP; LED bright, and a tinkling, the pairing is successful; click switch to start playing music (to support playback device) the indicator light flashes slowly, and then click the switch can pause --LED bright; press 3 seconds off Bluetooth; when playing music can adjust EQ the knob to change the music high / medium / low frequency;

10.PHONES
Connect the headset and disconnect the speakers.

11.AC INLET SOCKET
Connect the included AC power cable to this inlet.

12.POWER SWITCH
Switch ON/OFF the machine.

SPECIFICATION

Power Output: 30W RMS

Power Consumption: 35W

Impendence

DRUM: 33k ohm

MUSIC: 33k ohm

input sensitivity

DRUM:-27dB

MUSIC:-25dB

AUX IN:10dB

EQ

Bass: +/- 15dB@60Hz

MIDDEL: +/- 15dB@1.5kHz

Treble: +/- 15dB@10kHz

BLUETOOTH: Bluetooth V4.0 , Stereo input

Speaker: 6.5 inch woof + 2 inch tweeter)

Dimensions: 402mm*367mm*370mm (L*W*H)

Net Weight: 6.7KG

Gross Weight: 8KG